




### HVAT & Refrigerated Truck

What's Included:

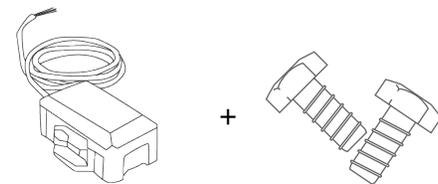

## Device Installation:

**1. Locate** your vehicle's unswitched 3-wire: 1) 12V/24V power line, 2) ignition sense (greater than 9V), 3) ground line. Verify that the ignition sense exceeds 9 volts when on.

*\*For best results, it is strongly recommended that the device connection be on its own circuit. If possible, connect the power input directly to the vehicle battery and protect the circuit with an inline fuse. If you must connect through the fuse box, use standard commercial wiring practices to create a permanent installation rather than using press-in fuse clips or other temporary measures.*

**2. Connect** black wire to vehicle's ground line.

*\*Must be connected to chassis ground.*


**3. Connect** red wire to vehicle's primary power source.

*\*Must be connected to a constant (unswitched) +12 VDC or +24 VDC supply. The preferred method is to connect directly to the vehicle battery terminal line.*

**4. Connect** white wire to vehicle's ignition line.

*\*The ignition line must be connected to the vehicle ignition or another appropriate key operated line, such as ACCESSORY, ensuring that power to the ignition wire is available only when the vehicle ignition is on.*


## Wire Connection Diagram:

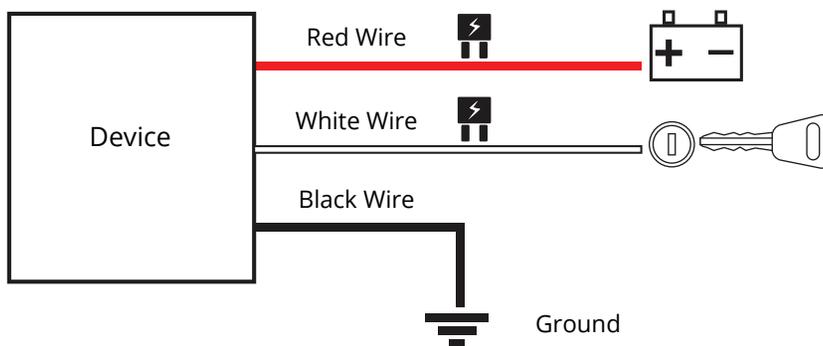

*Failure to connect these lines as described may result in discharge of the vehicle battery.*

**5. Place Device** on surface in vehicle ensuring that top of device (MiFleet logo side) faces the sky.

**6. Allow vehicle to run for 10 minutes** to allow for data to register on **MiFleet Portal**.

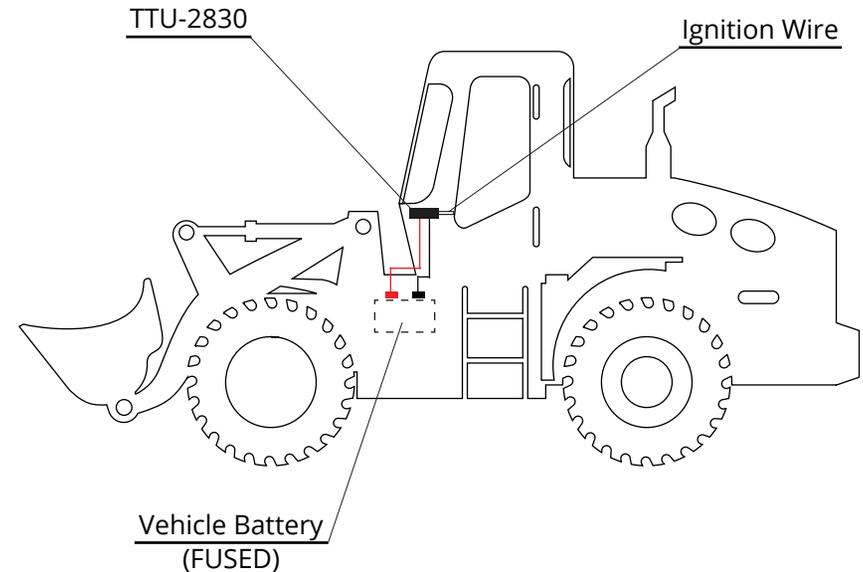

*\* Device and battery location may differ depending on vehicle model*

Device can be used for a certain amount of days without the need to be wired for charging (see battery usage below).

1 message a day = 3-4 months of battery life

4 messages a day = 1 month of battery life

*\*Estimated battery life*