





### HVAT - High Value Asset Tracker

What's Included:

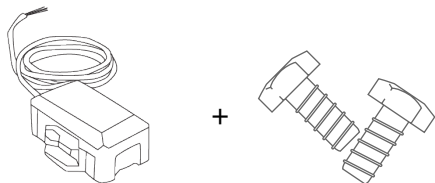

### HVAT - High Value Asset Tracker

What's Included:

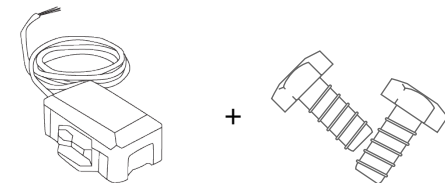


## Device Installation:

**1. Locate** your vehicle's unswitched 3-wire: 1) 12V/24V power line, 2) ignition sense (greater than 9V), 3) ground line. Verify that the ignition sense exceeds 9 volts when on.

*\*For best results, it is strongly recommended that the device connection be on its own circuit. If possible, connect the power input directly to the vehicle battery and protect the circuit with an inline fuse. If you must connect through the fuse box, use standard commercial wiring practices to create a permanent installation rather than using press-in fuse clips or other temporary measures.*

**2.** Place **Device** on surface in vehicle ensuring that top of device (MiFleet logo side) faces the sky.

**3.** Allow vehicle to **run for 10 minutes** to allow for data to **register on MiFleet Portal.**

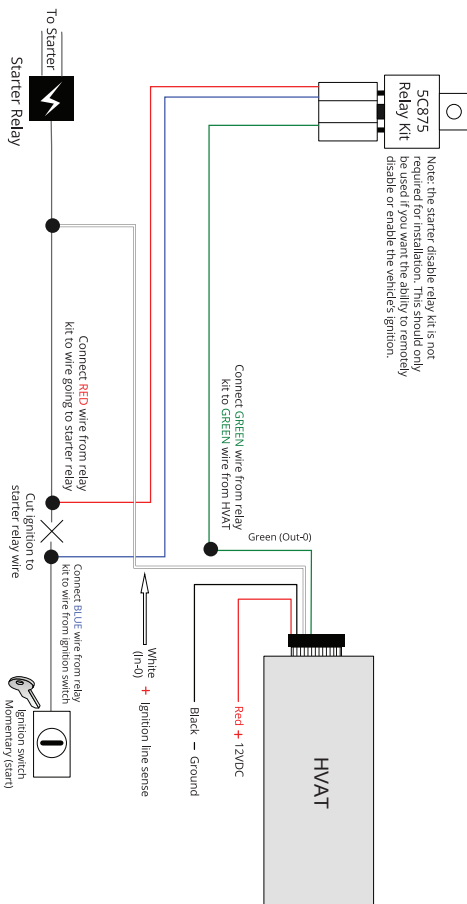

**Follow diagram for proper install instructions.**


## Device Installation:

**1. Locate** your vehicle's unswitched 3-wire: 1) 12V/24V power line, 2) ignition sense (greater than 9V), 3) ground line. Verify that the ignition sense exceeds 9 volts when on.

*\*For best results, it is strongly recommended that the device connection be on its own circuit. If possible, connect the power input directly to the vehicle battery and protect the circuit with an inline fuse. If you must connect through the fuse box, use standard commercial wiring practices to create a permanent installation rather than using press-in fuse clips or other temporary measures.*

**2.** Place **Device** on surface in vehicle ensuring that top of device (MiFleet logo side) faces the sky.

**3.** Allow vehicle to **run for 10 minutes** to allow for data to **register on MiFleet Portal.**

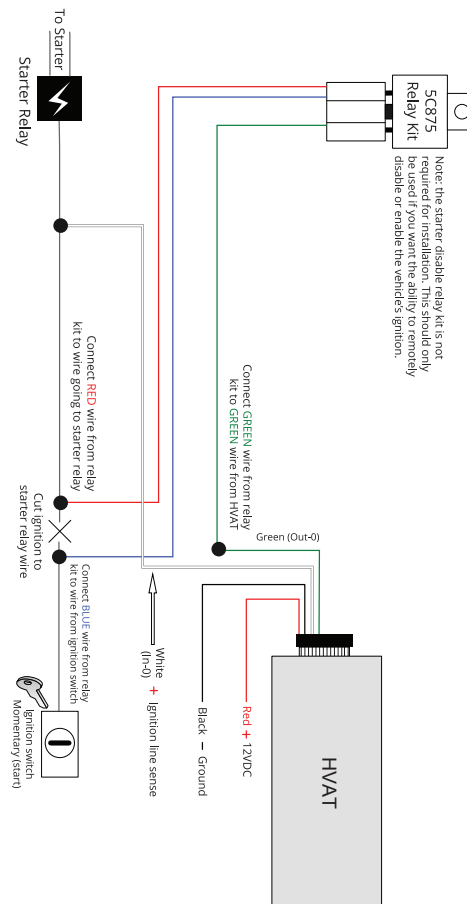

**Follow diagram for proper install instructions.**