


## Installation Guide

## Installation Guide




### OBDII Light Duty

What's Included:

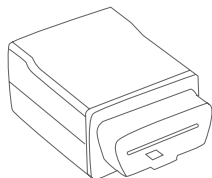

### OBDII Light Duty

What's Included:

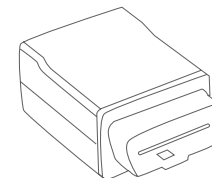

### Prior to Installation:

We recommend writing down the following information.

**Name of Asset:** \_\_\_\_\_

**Asset Details (State, or Group):** \_\_\_\_\_

**ESN of Installed Device:** \_\_\_\_\_

**Current odometer:** \_\_\_\_\_

### Device Installation:

1. Locate the vehicles OBD diagnostic port, this is usually located on the driver's side of the vehicle under the dash, hidden behind a cover plate or on the side of a center console. **(Fig.1)**

*\*Some foreign/luxury vehicles such as Toyota, Honda, BMW, etc. may have a slightly different variation of the standard OBDII plug and/or have the plug hidden in a nonstandard location. If you have a foreign vehicle, and cannot locate your OBD port, please consult your user manual or local dealership to help locate it.*

2. Once the OBDII diagnostic port has been located, plug the MiFleet hardware into the port.**(Fig.2)**

Fig. 1



Fig. 2



### OPTIONAL STEPS:

3. While your vehicle is outdoors, turn the vehicle Ignition on so the vehicle is running and let it run for 10 minutes. This will allow the unit to go through a vehicle discovery process. After 10 minutes has expired turn your vehicle off. You should be able to locate the unit on the map in on your MiFleet account.

*\*If the test completes successfully. If the previous test does NOT complete successfully, please contact technical support at 1.866.643.5338 opt 2 with your Customer account name and device ESN.*

### Prior to Installation:

We recommend writing down the following information.

**Name of Asset:** \_\_\_\_\_

**Asset Details (State, or Group):** \_\_\_\_\_

**ESN of Installed Device:** \_\_\_\_\_

**Current odometer:** \_\_\_\_\_

### Device Installation:

1. Locate the vehicles OBD diagnostic port, this is usually located on the driver's side of the vehicle under the dash, hidden behind a cover plate or on the side of a center console. **(Fig.1)**

*\*Some foreign/luxury vehicles such as Toyota, Honda, BMW, etc. may have a slightly different variation of the standard OBDII plug and/or have the plug hidden in a nonstandard location. If you have a foreign vehicle, and cannot locate your OBD port, please consult your user manual or local dealership to help locate it.*

2. Once the OBDII diagnostic port has been located, plug the MiFleet hardware into the port.**(Fig.2)**

Fig. 1



Fig. 2



### OPTIONAL STEPS:

3. While your vehicle is outdoors, turn the vehicle Ignition on so the vehicle is running and let it run for 10 minutes. This will allow the unit to go through a vehicle discovery process. After 10 minutes has expired turn your vehicle off. You should be able to locate the unit on the map in on your MiFleet account.

*\*If the test completes successfully. If the previous test does NOT complete successfully, please contact technical support at 1.866.643.5338 opt 2 with your Customer account name and device ESN.*